

INSTALLATION INSTRUCTIONS FOR RADIANT INFRARED PANEL AND STRAIGHT FINSTRIP HEATING ELEMENTS

1. Turn off power to dryer.



Death or severe injury could result!

To avoid electrocution, always turn off power to dryer before working on heating elements.

2. Before disconnecting the old heater, note its current wiring for reconnection later.
3. Check all wires and terminals for damage. Replace them if they are burned, frayed, or cracked. Use the correct gauge replacement wire. If you need wire or have questions, contact the G.P.I. Service Department at the number below.
4. Attach the wire terminal to the new heater and tighten screw, using a screwdriver.



Do not twist or bend the heater connection area or else it may be damaged.

Do not overtighten the screws on the mounting ends of the radiant infrared panel and straight finstrip heating elements; these heaters need room to expand when hot.

For HEATERS, WIRE, WIRE TERMINALS, INFRARED PANELS and more,

CALL TOLL-FREE: 800.444.PART



A Division of The A.W.T. World Trade Group
4321 N. Knox Ave., Chicago IL 60641 USA
773.725.4900 • Fax: 773.777.0909

REPLACEMENT PARTS AND REMANUFACTURING SERVICES FOR SCREEN PRINTING EQUIPMENT

parts@gpiparts.com • www.gpiparts.com