

JOYSTIK INSTALLATION & OPERATION

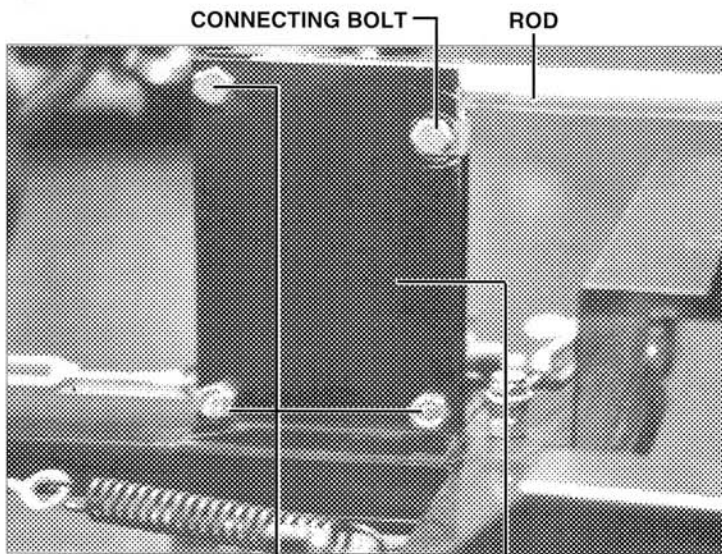


FIGURE 1 BOLTS MOUNTING BRACKET

1. Remove three of the four bolts on the mounting bracket. Loosen the remaining bolt connecting the Joystik rod to the mounting bracket. Secure the two bushings in the bracket for the top two bolts.

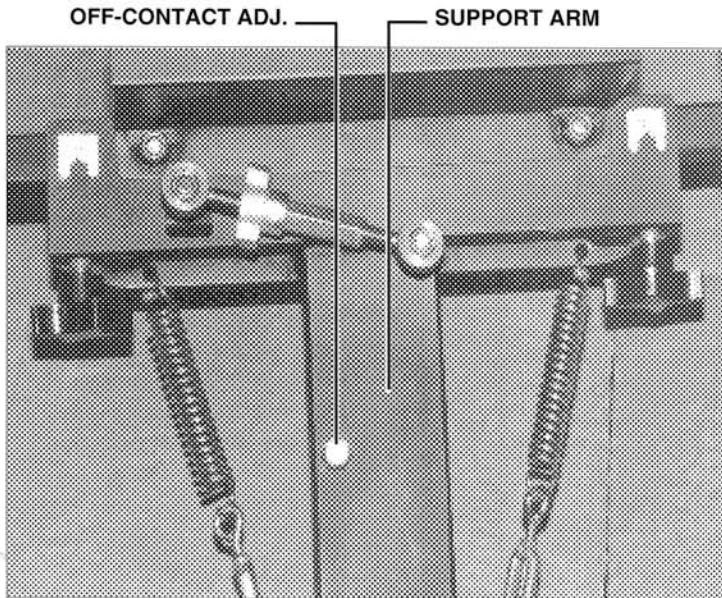


FIGURE 2

2. Open and attach the bottom side of the mounting bracket to the support arm on which the Joystik will operate. Position the bracket as close to the screen as possible without interfering with the range of the turnbuckles or off-contact adjustment. Replace and secure all bushings, nuts and bolts.


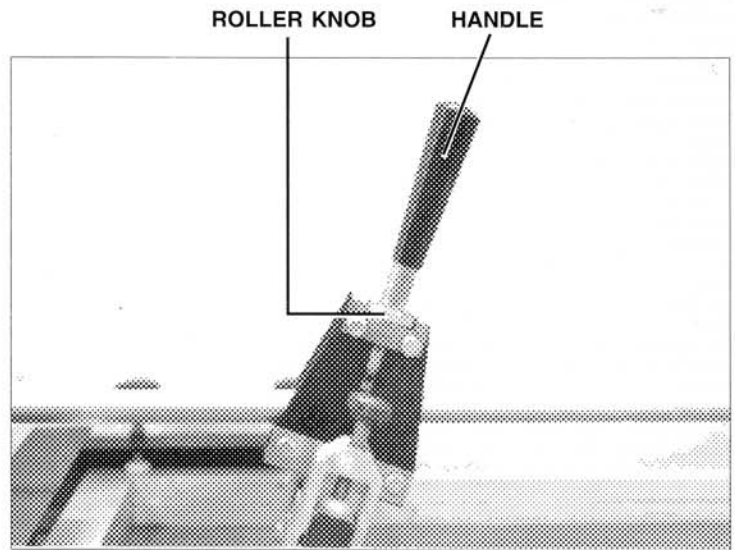


FIGURE 3

3. Loosen the Joystik handle. Adjust the roller knob to the appropriate angle for the production. Tighten the handle to lock the angle in place.

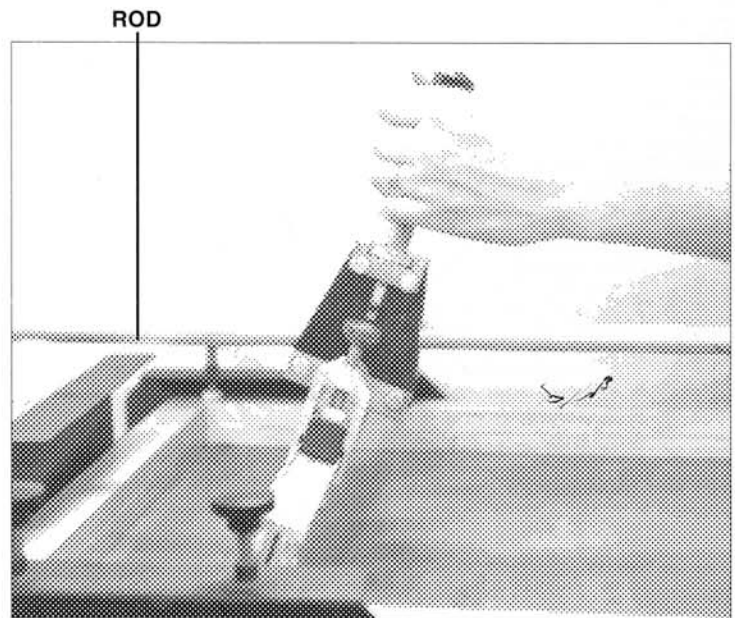

4. The Joystik assembly is raised and lowered with the screen. Pull the Joystik towards you to print, flood the screen by dragging the Joystik to the back of the screen. **NOTE:** When storing the screen and Joystik in the upright position, rest the squeegee at the back inner edge of the screen. Always test print with the Joystik before proceeding on to production runs.